

Overview:

In situations where your installation requires more than one PC with access to the same GuardPoint Pro database, you will have to add Workstations to the system.

This type of setup is broken two into two areas; the main GuardPoint Pro installation – the server – which holds the database and other unique files, and one or more satellite installations – the Workstations – which access the main server whilst they are being run.

This document is a guide to establishing a simple Server and Workstation installation for GuardPoint Pro. Note that this installation covers only the most commonly used version of GuardPoint Pro, the Access version; users requiring assistance with the SQL version should contact Sensor's technical support department.

Setting up the Network:

The first step in any Server/Workstation installation is to configure the network IP addresses so that the two computers are able to communicate effectively. Very little needs to be done at this stage, but it is vital that you follow this step carefully to avoid problems later on.

Every computer on a network has an IP address. This address is always listed as four sets of numbers, separated by full stops, and is used – amongst other things – to uniquely identify that computer. GuardPoint Pro requires that all IP addresses used by its installations are static (that is to say, they do not change each time the computer is started up or rebooted).

To check/update the IP addresses you will need to access the TCP/IP Properties window. This is normally done by going to Start, Settings, Control Panel, then selecting the icon Network and internet, click onto Network sharing center, click change adapter setting to the left

In the new window, right the Ethernet network connection icon, select properties. Finally, scroll down the list until you see Internet Protocol Version 4 (TCP/IPV4) and double click



- Nedilek		Configure	
This connectio	n uses the following items:		
QoS F	Packet Scheduler soft Network Adapter Multiplexic soft LLDP Protocol Driver	or Protocol	^
 ✓ → Link-L ✓ → Intern ✓ → Intern 	Layer Topology Discovery Map Layer Topology Discovery Resp let Protocol Version 6 (TCP/IPv let Protocol Version 4 (TCP/IPv	onder 6) 4)	*
 ✓ → Link-L ✓ → Intem ✓ → Intem 	Layer Topology Discovery Mapp Layer Topology Discovery Resp let Protocol Version 6 (TCP/IPv let Protocol Version 4 (TCP/IPv	Ser 1/O Driver Sonder (6) (4)	*
 ✓ → Link-L ✓ → Intem ✓ → Intem < Install 	Layer Topology Discovery Mapp Layer Topology Discovery Resp let Protocol Version 6 (TCP/IPv let Protocol Version 4 (TCP/IPv Uninstall	onder 6) 4) Properties	>

Your window should now look something like the below

Internet Protocol Version 4 (TCP/IPv4) Properties			
General			
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.			
Obtain an IP address automatical	у		
• Use the following IP address:			
IP address:	192.168.0.15		
Subnet mask:	255 . 255 . 255 . 0		
Default gateway:	192.168.0.254		
Obtain DNS server address automatically			
• Use the following DNS server addr	resses:	- 1	
Preferred DNS server:	192.168.0.254		
Alternate DNS server:	8.8.8.8		
Validate settings upon exit	Advanced		
	OK Cancel		



Click on the Use the following IP address: option and fill out an address.

Important points to remember are:

1) Always ensure that the first three sets of numbers are

the same on both the Server and on any workstations.

2) The last number should always be unique.

3) The Subnet mask and the Default Gateway settings can both be left at their defaults, as shown.

Once done, click Ok to finish. This process should be done on both the Server and on your Workstations.

Server Configuration

You will need to tell the server to accept a Workstation.

Run GPP server software

At the GPP menu select Parameter>Computer.

ø	Computer	- 🗆 ×
New Save Cancel First Prev.	Next Last Downld. Search Print Close	
Select a computer :		
Main Work Station	Name : Description : Workstaion Image: Computer parameters MELISSA Image: Computer parameters IP address : Image: Computer parameters 192.168.0.14 Image: Computer parameters Subnet mask : 239.0.0.60	~

You will need to create a Workstation record at this screen

The Name box can contain anything, but it is probably best to use names which are immediately recognisable. The Computer Parameters box must be completed with the name of the computer.

This can be determined buy opening Control Panel>System and Security>System.

It is vital that this name is filled out correctly.

The dropdown box arrow on the right of this section should allow you to select this name automatically.

The IP Address should also be filled out.

This is the address you established in the section Setting up the

Network above.

Clicking on the IP button to the right should automatically fill out the IP address.

The Subnet Mask box can be left at its default, which is normally our multicast address, 239.0.0.60



Once you have created a record for the workstation, Save it.

When you have created both records, ensure they are saved, then quit GPP and restart the computer.

Server Folder Permissions:

Before moving on to the workstation, there is one more task to perform on the server.

It is vital that the folder containing the GuardPoint Pro installation is fully shared on the network, and available to all connected computers.

In order to do this, navigate to the parent folder of GuardPoint Pro (C:\Program Files (x86) by default), and find the folder GuardPointPro.

Right-click it, select properties and then the sharing tab.

👢 GuardPointPro3.1.064 Properties 🗙			
General Sharing Security Customize			
Network File and Folder Sharing			
GuardPointPro3.1.064 Not Shared			
Network Path: Not Shared			
Share			
Advanced Sharing			
Set custom permissions, create multiple shares, and set other advanced sharing options.			
Network Starting			
Password Protection			
People must have a user account and password for this computer to access shared folders.			
To change this setting, use the <u>Network and Sharing Center</u> .			
Close Cancel Apply			



		×
۲	🕺 File Sharing	
	Choose people to share with	
	Type a name and then click Add, or click the arrow to find someone	
	1	
	everyone	V Add
	Name	Permission Level
	Administrators	Owner
	💈 Jay Gleave (jaygleave@hotmail.com)	Read/Write 🔻
	I'm having trouble sharing	
	rinnaving trouble sharing	
	3	

Set the folder to be shared by everyone.

If you are uncertain of this process, consult whoever looks after the network at the installation site.

The server setup is now complete and you can move on to the workstation.



Workstation – Mapping the Drive:

Prior to installing the software, you will need to establish a route by which the software will connect to the server's database. This is done by using the Windows function of Drive Mapping.

Open File Explorer and select This PC.

Click the Map network drive button in the ribbon menu at the top, then select "Map network drive." (This is under the Computer tab, which should open automatically when you go to This PC, as above.)

🍠 🛛 🔳 💌 🛛 This PC		- 🗆 X
File Computer V	iew	~ 0
Properties Open Renar	Koof Map network Add a retroart Cool Cool	
Create a shortcut to a folder or computer or	a shared in a network.	V 🖸 Search Thi., P
# Quick access	~ Folders (6)	
😌 Dropbax 🝊 OneDrive	Desktop Documents	
S This PC	Downloads Music	
🥩 Network	Pictures Videos	
	 Devices and drives (3) 	
	Windows8_OS (C:) External Drive (D:)	
	26.2 GB free of 100 GB 305 GB free of 683 G	8
	Removable Disk (E)	
9 items		j= z

Select the drive letter you want to use for the network folder, then click Browse.



Navigate to the folder you want to map and hit OK after selecting it.



Confirm your selection and click Finish. You can choose to reconnect to the folder every time you sign in so it's always available to you

When you're done, you should see the new drive letter under This PC and will be able to access its contents like you would any other folder.

Workstation Installation:

You are now ready for the final step; installing the workstation computer. It is vital that the server computer is on and that GuardPoint Pro is running on it prior to installing the workstation software.

To install the workstation software see these steps

After choosing the language, you will be asked to choose the application type, at which you should select Workstation.

1 <mark>8</mark>	Setup - GuardPointPro	-		×
Select Addi Which add	itional Tasks ditional tasks should be performed?		C	3
Select the GuardPoin	additional tasks you would like Setup to perform while installing itPro, then click Next.]		
Install Typ	e			
Full Sector	etup			
🔘 Updat	te Setup			
Applicatio	n Type:			
⊖ Serve	er			
Works	station			
Desktop I	lcon:			
✓ Create	e a desktop icon			
	< Back Next >		Cance	el



follow wizard until making sure you select Access when prompted.

On the Server Application Path screen, ensure that the box is filled out with the network drive mapped earlier (in this example, this is Z:/).

19	Setup - GuardPointPro	_ 🗆 🗙
Server Application Pa	th	
Select the network pat You can press the Brow	h where the server application is installed: wse button to select a folder.	
Z:		
	< Back N	ext > Cancel



Troubleshooting:

A server and workstation setup should be a relatively simple process, but things can sometimes go wrong. Here is a collection of the more common problems, and their solutions.

Folder Permissions

The workstation must have full access and permissions to the GuardPoint Pro folder on the server. An easy way to test this is to navigate to the folder from the workstation, then create a new text document inside it.

This will confirm that the workstation can both access the folder, and also has permission to write to it.

Firewall

A common problem that is often and easily overlooked is the presence of a firewall, especially the firewall that comes built into Windows.

Check that the firewall is either not running, or is not blocking the network.

If the installation consistently fails, try disabling the firewall on both the server and the workstation,

then carrying out the installation process outlined in this document.

Once installed, you can replace the firewall and test the connection.

GuardPointPro.ini

If you are experiencing problems with connection, it might be an idea to check the software's ini file. Navigate to the GuardPoint Pro folder on each machine, then locate the file guardpointpro.ini. Double-click it to open the file.

Under the heading [Communications], the server ini file should read isWS = 0

Under the heading [Communications], the workstation ini file should read isWS = 1

Under the heading [Database], the server ini file should read DbsFolder =

Under the heading [Database], the workstation ini file should read DbsFolder = # where # is the letter of the drive that was mapped earlier.

So, in this example the workstation's ini file would read DbsFolder = Z:/



Spread.conf

The file spread.conf exists in the server's installation folder (C:/Program Files/Guardpointpro/ by default). If you are experiencing problems, open this file with Notepad. It should look something like this:

 Spread_Segment
 192.168.1.255:4803 {

 Server
 192.168.1.1

 Workstation
 192.168.1.2

}

Please refer to this <u>document</u> for our single spread method which is preferred for server/workstation spread configuration

DangerousMonitor = true

Check that both the server and workstation IP addresses appear, and that are correct.

If they are not, or not do both appear

do not change the file, as you will cause the software to stop working if you attempt to edit it.

Instead, load GuardPoint Pro and go back to the Parameter, Computer section, listed under the Server Installation section above.

Ensure that both the server and workstation are listed, and that their computer names and IP addresses are correct.