


Aperio Wireless Hub Connection Diagram

Aperio locks will come already paired and configured for use with IC controllers
To connect the Aperio wireless hub with IC controllers use the following wiring diagram.

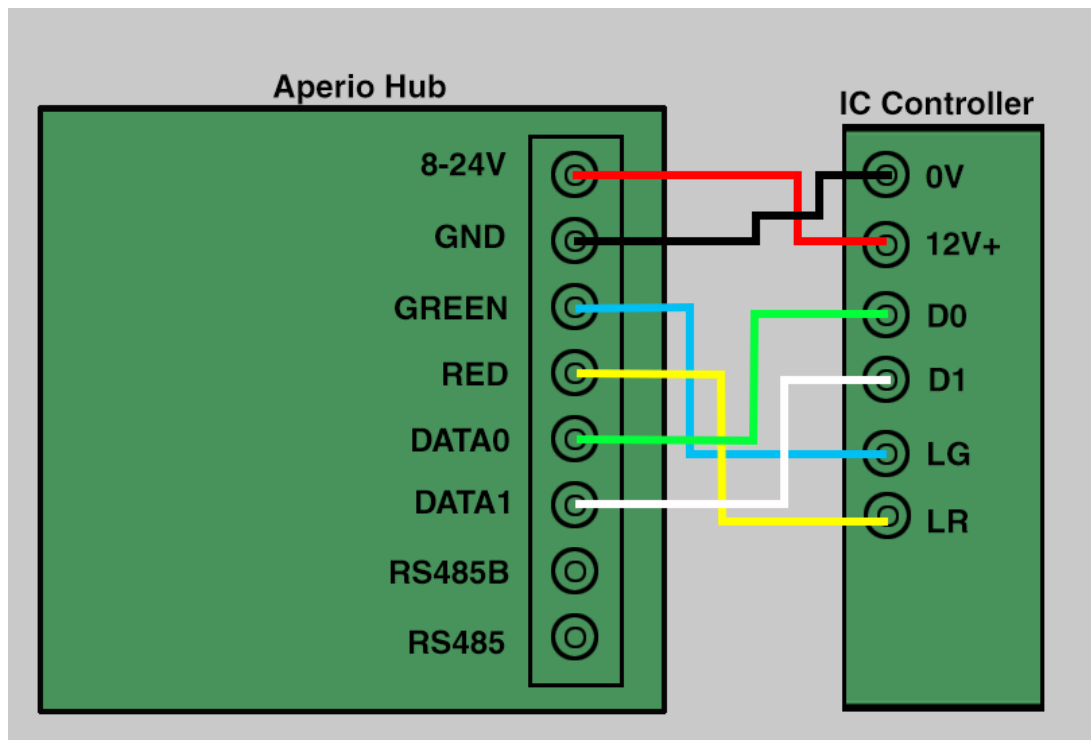

Aperio Hub	IC Controller
8-24V	12V
GND	0V
GREEN	LG
RED	LR
DATA0	D0
DATA1	D1