

Table of contents:

Introduction	1
Installation	2
Installation Procedure	2
Configuration of the Galaxy Alarm Panel	3
Steps to configure Galaxy in GPP	3
Requirement:	3
Controller network screen	4
Controller screen	4
Event handling program screen	5
Action screen:	5
Maps screen	6
User Authorizations on Groups	7



Introduction

The new GuardPoint Pro module, integrates the Galaxy Dimension alarm panel series which gives intrusion security solution for mid to large commercial security installations.

Within GuardPoint Pro, the work with a Galaxy panel is similar to the one with any other Sensor controllers

Galaxy zones are managed like Sensor controllers inputs. Icons can be allocated to inputs, which can be positioned on a map. They can be linked to global reflexes. Inputs can be activated or deactivated (un-omit or omit in Galaxy terminology). Alarm events from those inputs will be displayed on the log.

Up to 520 inputs can be configured on one Galaxy device, which is connected to GuardPoint Pro via TCP connection and works in event mode which gives fast response time.

Galaxy Groups can also be managed.

Of course you can mix in a same GuardPoint Pro, alarm from a Sensor controller and from a Galaxy panel.

A new component "GalaxyService" has been developed to support communication with Galaxy panels. It is based on SIA protocol. This component is designed to work as a windows service, and can work independently from GuardPoint Pro. "GalaxyService" can work on a different PC than GuardPoint Pro, or on the same one.



GuardPoint Pro can support any number of Galaxy devices. Since each communication server works as a separate process, many Galaxy devices can work in parallel, and GuardPoint Pro is free of heavy load.



Installation

Installation Procedure

Copy the 4 files in GPP folder

- Step1_Run_UninstallGalaxyService.bat
- Step2_Unzip_GalaxyService.zip
- Step3_Run_InstallGalaxyService.bat
- GalaxyServiceOptions.xml (only if it does not exist)

Then:

Double click on Step1_Run_UninstallGalaxyService.bat

This will uninstall previous version and stop current running GalaxyService.

Unzip the Step2_Unzip_GalaxyService.zip to GPP folder.

Open the file GalaxyServiceOptions.xml by any text editor and update it with the relevant details of the Galaxy Alarm Panel IP



Where

- GalaxyIP is the IP of the Galaxy Alarm Panel
- PCListenPort is the port defined in the Galaxy to send the events (by default 10002)
- UserCode is the Remote User Code defined in the Galaxy Alarm Panel
- Timeout is the maximum number of milliseconds that we are waiting for an answer of a command. It
- should be increased according to the number of zones of the Galaxy Alarm Panel.
- PollingTimeout is the maximum number of milliseconds that we are waiting for an answer of polling.
- RetryInterval is the number of milliseconds that we are waiting when some commands were not accepted. When no waiting commands, we check each 30 seconds.
- EthernetFirmware2_11 is 0 or 1. It defined if the Ethernet card firmware is version 2.11 or upper. If this is the case we make polling using Get Time and Date (XTD) if not we use a Login command.
- myIP is the IP address of the current PC. It should release empty to be taken automatically. In specific case (many network cards), it allows to specify an address.



Double click on Step3_Run_InstallGalaxyService.bat This will install new version and start GalaxyService.

Notes:

You must open an exception in the Microsoft Firewall, in order to receive events. We use InstallUtil.exe and Sleep.exe that should already exist in GPP folder.

Configuration of the Galaxy Alarm Panel

The configuration of the IP interface is done by keyboard (or in RSS Software). Type 112233 + ENT You should get 10=SETTING If not press ENT until you get 10=SETTING If you get "insufficient access rights", Type 12345 + ENT, 48 + FNT1 + FNT 1 + ENT1 + ENT (1=Enable). Then you have 10 min to log in with 112233 To access to Ethernet module configuration, go to menu 56.4 (you can type 56 ENT then 4 ENT or navigate A> until 50 ENT, A> until 56 ENT ...) 01=MODULE CONFIG 1=IP ADDRESS type the IP of the Galaxy panel 4=NETWORK MASK type the subnet mask by default 255.255.255.0 02=ALARM REPORT 1=FORMAT, Select 1=SIA Select 4 (SIA Level) 1=TRIGGER EVENTS Select ON for all the event type 2=PRIMARY IP Type the IP of the GPP Server 1=IP ADDRESS 2=PORT NO. 10002 4=ACCOUNT NO. 4444 for example 8=PROTOCOL Select 1=TCP 03=REMOTE ACCESS 1=ACCESS PERIOD Select 4=ANY TIME

1=ACCESS PERIODSelect 4=ANY TIME2=MODESelect 1=DIRECT ACCESS



Steps to configure Galaxy in GuardPoint Pro:

Requirement:

• GPP version 2.3.509 with Alarm Panel (AP) module in the Plug

• Honeywell Galaxy Dimension 48 / 96 / 264 / 520 firmware version 6.50 (or upper) with Ethernet Card (version 2.11 preferable), or Galaxy 3 - 48/144/520

Controller network screen

• Every Galaxy controller must have its own TCP network in the system, through which the Galaxy Service and GPP communicates.

• The IP address is the Galaxy device IP, the port is dummy just for compatibility.



Controller screen

• A Galaxy controller can be created like any other controller, you just select Galaxy type and the number of inputs.

- The controller address is dummy, so just put 0.
- Every Galaxy controller should have its own TCP network.

Controller	
New Save Cancel First Prev. Ne	Capacital Colorer CD 48
Mega TPL	Same definitions as : (Nore)
	General Readers Input Output



All inputs and outputs will be created automatically by GPP.

Controller			
New Save Delete First Prev. N	ext Last Downld. Search Print Clos	e	
Select a controller :			
Galaxy GD-48	Input Colory CD 49		
Galaxy GD-49	Tilput - Galaxy GD-40		
Mega	Num Name	Tune Status	
TPL	1034 i1034 / Galaxy GD-48	Digital NO	
	1035 i1035 / Galaxy GD-48	Digital NO	
	1036 i1036 / Galaxy GD-48	Digital NO	
	1037 i1037 / Galaxy GD-48	Digital NO	
	1038 i1038 / Galaxy GD-48	Digital NO	
	1041 i1041 / Galaxy GD-48	Digital NO	
	1042 i1042 / Galaxy GD-48	Digital NO	
	1043 i1043 / Galaxy GD-48	Digital NO	
	1044 i1044 / Galaxy GD-48	Digital NO	
	1045 i1045 / Galaxy GD-48	Digital NO	<u></u>
	1046 i1046 / Galaxy GD-48	Digital NO	<u></u>
	1047 i1047 / Galaxy GD-48	Digital NO	
	1048 i1048 / Galaxy GD-48	Digital NO	
	1051 i1051 / Galaxy GD-48	Digital NO	
	1052 i1052 / Galaxy GD-48	Digital NO	
	1053 i1053 / Galaxy GD-48	Digital NO	
	1054 01054 / Colour CD 49	Diait-I NO	
	General		
	Readers		
	Input		
	Output		
1	Local reflexes		

Event handling program screen

- Unlike all other Sensor controllers, the Galaxy panel will support (for now) only two Weekly Programs, "WP Always" and "WP Never".
- "WP Never" for input, will make the input "Omit", "WP Always" will set the input to be "Un omit"

Event handling programme			
New Save Delete	st Prev. Next Last Downld.	Sgarch Print Close	
Alarms Change Galaxy empty WP to W	/P always		
View inputs) View group of inputs		
# _ Network 1	Input 107 / J alays GD 48 Low Battey 007 / J alays GD 48 Low Battey 007 / J alays GD 48 Power False 007 / J alays GD 48 Power False 007 / J alays GD 48 Power False 007 / J alays GD 48 Auto protect 007 / J alays GD 48 0007 / J alays GD 48 <td< th=""><th>Weekly programme </th><th></th></td<>	Weekly programme	
Alarms			
Giobal reflexes			



Action screen:

- A New action type has been added to support Galaxy groups.
- Operations on input Groups of Galaxy can be done by Action type "Set Galaxy groups".

Action				
New Save Delete	Image: Prev. Image: Next last	Do <u>w</u> nld. S <u>e</u> arch P <u>r</u> int <u>C</u> lose		
Select an action:			Make it a process	Test
Set Group 2	General	- Set Group 2		
All Mega Set Group 2	Name :		Action type :	
sound	Set Group 2		📒 Set Galaxy groups	~
	Description : Lcon : ♥ D anger ♥ CDefau ▲ Danger	3 M for Set us b M for Uncet us 5 V for PartSet us	Galaxy GD-48 Group number: 2 Action on group: Set Level: 0	• •

Maps screen

The action referring to galaxy group can be shown on a map.

• Right click on an action which refers to a galaxy group, will open the menu from which you can perform on the group some operations: Set, Unset, Part set, System reset, Abort set, Force set.



• The state of the group will be shown by a different icon for each state (Set, Unset, Part set).

• Since Galaxy groups can be updated from Galaxy panel as well, the "Galaxy Service" will listen to all updates of Galaxy and report to GPP.



Full cycle notification:

• After setting to new state from the group menu, GPP reports to Galaxy Service to update Galaxy, Galaxy will report asynchronously the communication server about the new state of the group, and this information will be reported back to GPP. So if you set new state for a group and see the icon changes respectively you can be sure the Galaxy got it!!!

The action referring to galaxy inputs will be shown on a map.

- Inputs menu from right click will have the options for "Deactivate" and "Return to normal" as before.
- When the "Galaxy Service" starts, it updates all inputs and groups status.

User Authorizations on Groups

We add a Domain Level definition in the Authorization levels: it defines on which levels can operate the user that have this Authorization level.

• All Screen can operate on everything (greater or equal to zero)



Note: Only Super User can change theses settings. On Galaxy groups' actions and on Galaxy Zones could be defined a level.

General - Group 3 Set	
Name :	Action type :
Group 3 Set	Set Galaxy groups
Description :	Galaxy controller:
A	GD48
	Group number:
Ŧ	3
Icon :	
🕼 <default> 🔛 for Set 📖</default>	
🛠 Danger 1 🛛 🗹 for UnSet 📖	Action on group:
🛕 Danger 2 🛛 🖌 for PartSet 📖	Set 💌
	Level :

Input	0	
Select an input :	ev. n	egt East Downid. Search Fint Close
i1026 / GD 48	_	General - i1026 / GD48
ml / 6D/20 Low 8 altery 00 / 6D/20 Low 8 altery 00 / 6D/20 Low 8 altery 03 / 6D/20 Low 8 altery 03 / 6D/20 Low 8 altery 03 / 6D/20 Low 8 altery 01 / 7 / 6D/48 altery 01 / 7 / 6D	н	Name: Statu if exert. Name: Wiedly programme: Pack (GA-0) Wiedly programme: Number Statu Doctober No Description : Poult delay hype Optical Status Poult ON Status Optical Status Other Khone> @ Chelaub Status Camera Khone> Level: Status
11033 / GD 48 11034 / GD 48		General
1035 / GD 48	~	Alarm status



When a User in the software try to execute an action on a Galaxy Group or a Galaxy zone, we first check that the level of the group or of the input is included in the user Domain level.