

Adding a Controller

1. In the GuardPointPro main menu go to Parameter>Controller Network



2. At the Controller network screen click new, give the network a memorable name an then save



 At the bottom of the controller network screen there are 2 tabs, General & Definition, click definition You now have 2 choices based on the type of controller, IP or Serial If you have an IP controller you first need to set the IP address of the controller. Consult the <u>tibbo document</u> for tibbo IP controller or the <u>Lantronix document</u> for lantronix IP controllers.



Configuring a Serial controller Network

1. At the definition tab of the controller network screen select the com definition then the com port number assigned to the USB to Serial converter [Note: You can find this number from the device manager tree of you PC, looking in Ports (Com & LPT). Once the correct port number is selected click save

Definition - Network 2				
Port :				
Password	2 3 3 4 5 6 7 8			
Time out delay :	1000 Msec.			
Time out polling :	1000 Msec.			
Waiting delay :	50 Msec.			
General				
Definition				

Configuring an IP controller Network

- 1. At the definition tab of the controller network screen select the TCP definition.
- 2. Fill in the field Phone no. or TCP address with the IP address you assigned to the controller from Part 3 of adding a controller including the port number at the end of IP address. Save and close controller network screen

[Note: Default tibbo port is 1001, Default Lantronix port is 10001]

Definition - Network 2				
Port :	ТСР	If remote or TCP		
TOT:		192.168.0.110:1001		
Password		for TCP put <address>:<port> such as 10.0.0.1:1001</port></address>		



Adding the new controller.

1. In the GuardPointPro main menu go to Parameter>Controller.



2. At the Controller screen click new, give the controller a memorable name an then save

General - Controller 002	
Name : Controller 002 Description :	Controller address Network Network 1 Controller address (00-31)
↓ Active	Controller type IC2000 Access
Same definitions as : <none></none>	





- 3. At the controller address>Network you should select from the pick list the network name you made earlier.
- The controller address is the physical address of the controller configured by the large red 8 switch dipswitch on the controller
 [Note: Refer to the manual of the controller on how to set the physical address/dipswitches]
- 5. At the controller Type select from the pick list the controller that matches your controller

General - Controller 002	
Name : Controller 002 Description :	Controller address Network Network 1 Controller address (00-31) 1 Controller type IC2000 Access
Same definitions as : <none></none>	

6. Click into the Active box, a tick will appear. Now save, your controller will come online.