

How to initialize a Tibbo module

1. To initialize a Tibbo module, do the following

Enter the programming mode:

- If using **EXT-TCP board**, press on the **SW2 button** once (RESET BUTTON ON TIBBO BOARD)



2. - If using **IC1000/500-IP board**

shortcut the **JP4 jumper** briefly

IC1000/500-IP board



3.- If using **IC2000/4000 board**, shortcut the **JP4 jumper** briefly

IC2000/4000 board

4.- The red and green LEDs should blink continuousl
Wait 5 seconds at least.

5.- Press/shortcut again the same button/jumper and
hold it **for 5 seconds**, until the green
LED lights continuousl

6.- Power off and power on the board
The Tibbo module is initialized its default IP address is
127.0.0.1

7. -Configure the Tibbo module with DS MANAGER of
Tibbo Toolkit.

