

# NEO 40 Programming Instructions

## TECHNICAL DATA

Operating frequency	433,92MHz / 868,35MHz
Power supply	12V dc
Radiated power	< 10mW
Battery type	A23

## HOW TO PROGRAM YOUR TRANSMITTER

First, check if your receiver or control panel has the "PIN-MODE" sticker.

Then follow the instructions in each case.

(\*)

### Fast programming "PIN-MODE"

1 Position yourself about 2-4 metres away from the receiver.

2 Press the button on the back of the transmitter that you want to program with the tip of a ballpoint pen.

The receiver will emit a long beep and your transmitter will be programmed.

If your receiver/control panel doesn't hold the "PIN-MODE" sticker and if you already have an operating transmitter, you can programme others by following these instructions: (\*)

### Standard programming

1 Position yourself about 2-4 metres

away from the receiver, with the already operating transmitter (A) and the new one you wish to reprogramme (B).

2 Press the button on the back of the transmitter (A) with the tip of a ballpoint pen.

The receiver will emit a long beep. 3 Within 10 seconds, press the button of transmitter (B) selected for the function which you are programming.

The receiver will emit a short beep to confirm the programming.

4 After 10 seconds, the receiver will leave the programming with two short beeps.

(\*) Can only be used for conventional receiver installations.